

CX4015 FTIR Gas Analyzer



Multicomponent FTIR Gas Analyzer

Gasmeter On-line Series includes multicomponent gas analyzers for continuous monitoring applications. The Gasmeter CX4015 incorporates a Fourier transform infrared spectrometer, a temperature controlled sample cell, and signal processing electronics. The analyzer is fully equipped for fixed installations and it offers versatility and high performance for all industrial users.

The Gasmeter CX4015 is designed workplace air monitoring, and quality control applications. It is an ideal tool to measure components of interest in ambient conditions. The sample cell can be heated up to 50 °C. Sample cell absorption path length is selected according to the application.

The Gasmeter CX4015 allows simple calibration using only single component calibration gases. The user can easily configure the analyzer for a new set of compounds.

General parameters

Measuring principle:	Fourier transform infrared, FTIR
Performance:	Simultaneous analysis of up to 50 gas compounds
Response time, T₉₀:	Typically < 120 s, depending on the gas flow and measurement time
Operating temperature:	5 - 30°C, non-condensing air conditioning recommended

Storage temperature:	-20 - 60°C, non-condensing
Power supply:	100-115 or 230 V / 50 -60 Hz
Power consumption:	300 W max, continuous 150 W

Spectrometer

Resolution:	Recommended 8 cm ⁻¹ or 4 cm ⁻¹
Scan frequency:	10 scans / s
Detector:	Peltier cooled MCT
Source:	SiC, 1550 K
Beamsplitter:	ZnSe
Window material:	ZnSe
Wave number range:	900 - 4 200 cm ⁻¹

Sample cell

Structure:	Multi-pass, fixed path length 9.8 m
Standard material:	100 % rhodium coated aluminium
Mirrors:	Fixed, protected gold coating
Volume:	0.4 l
Connectors:	Inlet Swagelok 6 mm Outlet Swagelok 8 mm
Gaskets:	Viton® O-rings
Temperature:	50 °C, maximum
Window material:	AR coated ZnSe

Measuring parameters

Zero point calibration:	24 hours, calibration with nitrogen (5.0 or higher N ₂ recommended)
Zero point drift:	< 2 % of measuring range per zero point calibration interval
Sensitivity drift:	None
Linearity deviation:	< 2 % of measuring range
Temperature drifts:	< 2 % of measuring range per 10 K temperature change
Pressure influence:	1 % change of measuring value for 1 % sample pressure change. Ambient pressure changes measured and compensated

Electrical connectors

Digital interface:	9-pole D-connector for RS-232 Analyzer is connected to an external computer via RS-232C cable. The external computer controls Gasmeter.
Power connection:	Standard plug CEE-22

Gas inlet and outlet conditions

Gas temperature:	Non-condensing, the sample gas temperature should be the same as the sample cell temperature
Flow rate:	120 - 600 litres per hour
Gas filtration:	Filtration of particulates (2 µm) required
Sample gas pressure:	Ambient
Sample pump:	External, not included

Electronics

A/D converter:	Dynamic range 95 dB
Signal processor:	32-bit floating point DSP 120 MFLOPS
Computer:	External, not included

Analysis software (for external PC)

Operating system:	Windows 7 (32-bit)
Analysis software:	Calcmet for Windows


Options

Sample cell:	Multi-pass, fixed path length 2.5 m or 5.0 m
Pressure measurement:	Inside sample cell
External PC:	Gasmeter PC for control and analysis with optional alarm relay boards and analog inputs or outputs
Sample cell gaskets:	Kalrez®


Gasmeter Technologies Oy shall not be liable for technical or editorial errors or omissions contained herein. The information in this document is provided "as is" without warranty of any kind and is subject to change without notice. Should you find any errors, we would appreciate if you notified us.

Enclosure


Material:	Aluminium
Dimensions (mm):	482 * 196 * 450
Weight:	17 kg
CE label:	According to EMI guideline 89/336/EC

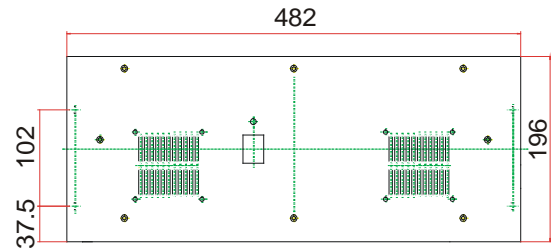

Front

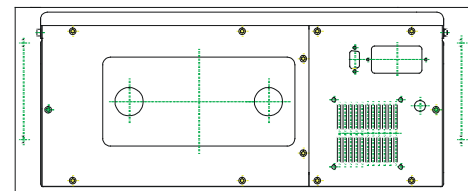

Back

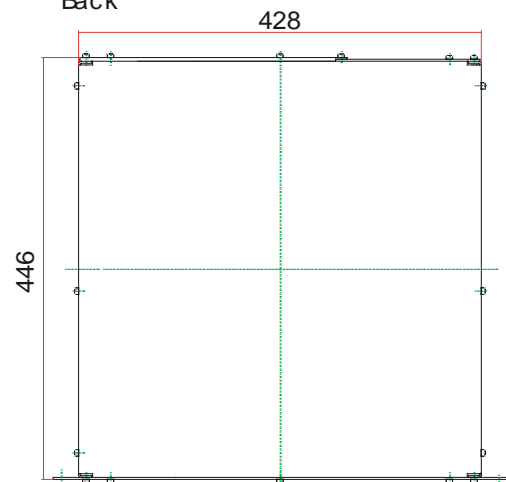

Side